

MS МАГИТОН СЕРВИЗ ООД

Пловдив - ул. "Софроний Врачански" No 19, 21
<http://www.magiton.com> e-mail: office@magiton.com;

тел: 032 / 622801 тел/факс: 032 / 622802
 hot-line support: 0889300455, 0889300456, 0889300459

ЗАРЕЖДАНЕ НА ТОНЕР КАСЕТИ ЗА ЧЕРНО-БЕЛИ ПРИНТЕРИ

ЛАЗЕРНИ ПРИНТЕРИ HEWLETT PACKARD

ПРИНТЕР	КАСЕТА	зареждане без / с чип	рециклиране без / с чип	смяна на магнитен вал при рециклиране
HP 5L / 5ML / 6L	C3906A	28	46	+ 10
HP 5P / 5MP / 6P / 6MP	C3903A	33	48	-
HP 4 / 4M / 4+ / 5M / 5N / 5+	92298A 92298X	33 39	50 56	-
HP 4L / 4ML / 4P / 4MP	92274A	33	50	-
HP 1100 / 3200	C4092A	28	46	+ 10
HP 1000 / 1005 / 1005w / 1200 / 1220 / 3300 / 3310 / HP 3320 / 3330 / 3380 MFP	C7115A/X	28	46	+ 10
HP 1010 / 1012 / 1015 / 1018 / 1020 / 1022 HP M1005/M1319/3010/3015/3020/3030/3050 MFP	Q2612A	28	44	+ 9
HP P1005 / P1006 / P1007 / P1008	CB435A	28 / 30	47 / 49	+ 10
HP P1505 / M1120 MFP / P1522	CB436A	30 / 32	49 / 51	+ 10
HP P1100 / P1102 / M1130 / M1210	CE285A	28 / 30	47 / 49	+ 10
HP P1560 / P1566 / P1606	CE278A	30 / 32	49 / 51	+ 10
HP P2055 (трябва чип !), P2035	CE505A CE505X	34 / 39 41 / 46	54 / 59 61 / 66	+ 19
HP P3015 (със чип)	CE255A CE255X	60 78	85 103	+ 13
HP 1150	Q2624A	33	50	+ 10
HP 1160	Q5949A	35 / 38	55 / 58	+ 10
HP 1320 / 3390 / 3392	Q5949X	45 / 48	65 / 68	+ 10
HP P2014 / P2015 / M2727	Q7553A Q7553X	35 / 38 45 / 48	55 / 58 65 / 68	+ 10
HP 2400 / 2410 / 2420 / 2430 (със чип)	Q6511A Q6511X	48 60	66 78	+ 18
HP P3005 / M3027MFP / M3035MFP (със чип)	Q7551A Q7551X	48 60	66 78	+ 18
HP 1300	Q2613A Q2613X	28 / 31 35 / 38	48 / 51 55 / 58	+ 10
HP 2300 (със чип)	Q2610	45	65	+ 15
HP 2100 / 2200	C4096	39	57	+ 12
HP 4000 / 4050	C4127A C4127X	36 42	56 62	+ 14

MS МАГИТОН СЕРВИЗ ООД

Пловдив - ул. "Софроний Врачански" No 19, 21
<http://www.magiton.com> e-mail: office@magiton.com;

тел: 032 / 622801 тел/факс: 032 / 622802
 hot-line support: 0889300455, 0889300456, 0889300459

ЛАЗЕРНИ ПРИНТЕРИ CANON

ПРИНТЕР	КАСЕТА	зареждане без чип	рециклиране без чип	смяна на магнитен вал при рециклиране
Canon LBP 2900 / 3000	CRG-703 (CR7616A005AA)	28	44	+ 9
Canon LBP 3300 / 3360	CRG-708 (CR0266B002AA)	35	55	+ 10
	CRG-708H (CR0917B002AA)	45	65	
Canon LBP 3010 / 3100	CRG-712 (CR1870B002AA)	28	47	+ 10
Canon LBP 3250	CRG-713 (CR1871B002AA)	28	48	+ 10
Canon LBP 3310 / 3370	CRG-715 (CR1975B002AA)	35	55	+ 10
	CRG-715H (CR1976B002AA)	45	65	
Canon LBP 800 / 810 / 1120	EP-22 (CRR94-2002250)	28	46	+ 10
Canon LBP 1210 / 1225	EP-25 (CR5773A004AA)	28	48	+ 10
Canon LBP 3200 / MF 3110 / MF 5630 / MF 5650	EP-26 / EP-27 (CR8489A002AA)	28	48	+ 10
Canon FAX L200/L220/L240/L250/L260/L260i/L280/ L290/L295/ L300/L350/L360, MultiPASS L60/L90	FX-3 (CHH11-6381460)	28	-	
Canon MF4010/4120/4140/4320/4330/4340/4660/4690 Canon FAX L100 / L110	FX-10 (CH0263B002AA)	28	44	+ 9
Canon PC 1 / 2 / 3 / 4 / 5 / 6 / 7 / 11 / 65	A-30 (1474A002AA)	30	-	
Canon FC 100/120/200/210/220/230/300/310/330/530 Canon PC 740/750/760/770/780	E-30 (1491A003BA)	33	-	

ЛАЗЕРНИ ПРИНТЕРИ KYOCERA MITA

ПРИНТЕР	КАСЕТА	зареждане	рециклиране
Kyocera Mita FS-600 / 670 / 680 / 800	TK-16	36	-
Kyocera Mita FS-1000 / 1010 / 1050 / 2010 150gr / 250 gr	TK-17	36 / 45	-
Kyocera Mita FS-1018 / 1118 MFP	TK-18	42	-
Kyocera Mita FS-1700/ 1750/ 3700/ 5700/ 6700/6900 150gr / 250 gr	TK-20	39 / 48	-
Kyocera Mita FS- 720 / 820 / 920 / 1016 / 1116 MFP	TK-110	42	-
Kyocera Mita FS-1030	TK-120	45	-
Kyocera Mita FS-1028 / 1128 MFP / 1300 / 1350 (с чип)	TK-130	65	-

MS МАГИТОН СЕРВИЗ ООД

Пловдив - ул. "Софроний Врачански" No 19, 21
<http://www.magiton.com> e-mail: office@magiton.com;

тел: 032 / 622801 тел/факс: 032 / 622802
 hot-line support: 0889300455, 0889300456, 0889300459

ЛАЗЕРНИ ПРИНТЕРИ XEROX

ПРИНТЕР	КАСЕТА	ЦЕНА зареждане	ЦЕНА непълно рециклиране	ЦЕНА пълно рециклиране	ЦЕНА смяна на чип
Xerox Docu Print P8EX	113R00296	39	-	-	-
Xerox Docu Centre PE114	013R00607	30	-	-	-
Xerox Work Centre PE120	013R00606	39	-	-	ВКЛ.
Xerox Work Centre PE220	013R00621	39	-	-	ВКЛ.
Xerox Phaser 3140 / 3155 / 3160	108R00908	28	-	-	-
Xerox Phaser 3150	109R00746 109R00747	33 / 42	-	-	ВКЛ.
Xerox Phaser 3250	106R01373 106R01374	42 / 50	-	-	ВКЛ.
Xerox Phaser 3115 / 3120 / 3121 / 3130 / 3132	109R00725	33	-	-	-
Xerox Phaser 3119 / Work Centre 3119 (* с чип, за принтери без фикс на фърмуера)	013R00625	37*	-	-	7*
Xerox Work Centre 3117 / 3122 / 3124 / 3125	106R01159	30	-	-	-
Xerox Phaser 3110 / 3210	109R00639	30	-	-	-
Xerox Work Centre 3210 / 3220 (* без чип, за принтери с фикс на фърмуера)	106R01485 106R01487	44* / 52*	-	-	-
Xerox Phaser 3200MFP	113R00735 113R00730	39 / 45	-	-	ВКЛ.
Xerox Phaser 3100MFP (фикс на принтера за 12000 копия - 24 лв)	106R01378 106R01379	33 / 39	-	-	20
Xerox Phaser 3428	106R01245 106R01246	48 / 60	-	-	ВКЛ.
Xerox Phaser 3420 / 3425	106R01033 106R01034	48 / 60	-	-	ВКЛ.

ЛАЗЕРНИ ПРИНТЕРИ SAMSUNG

ПРИНТЕР	КАСЕТА	ЦЕНА зареждане	ЦЕНА непълно рециклиране	ЦЕНА пълно рециклиране	ЦЕНА смяна на чип
Samsung ML 1660/1661/1665/1666/1670/1675/1860 Samsung SCX- 3201 / 3205	MLT-D1042S MLT-D1042L	36 / 39	-	49 / 52	ВКЛ.
Samsung ML 1910 / 1915 / 2525 / 2580 Samsung SCX- 4600 / 4623F , SF 650	MLT-D1052S MLT-D1052L	36 / 39	-	49 / 52	ВКЛ.
Samsung SCX- 4100	SCX-4100D3	28	-	45	-
Samsung SCX- 4200 / 4250	SCX-D4200A	28	-	45	5
Samsung SCX- 4300 (еднократен фикс на фърмуера на принтера – 24 лв)	MLT-D1092S	28	-	45	6
Samsung ML 1610 / 1640 / 2240 / 2010 / 2510 Samsung, SCX- 4321 / 4521	MLT-D108S ML-1610D3 SCX-4521D3	28	-	45	-
Samsung ML 1510 / 1520 / 1710 / 1740 / 1750	ML-1710D3	28	-	45	-
Samsung SCX- 4016 / 4116 / 4214 / 4216F Samung SF 560 / 565P / 750 / 755P	SCX-4216D3	30	-	48	-
Samsung ML 1010 / 1020 / 1250 / 1430	ML-1210D3	30	-	48	-
Samsung ML 2010 / 2015 / 2510 / 2570 / 2571	ML-2010D3	30	-	48	-

MS МАГИТОН СЕРВИЗ ООД

Пловдив - ул. "Софроний Врачански" No 19, 21
<http://www.magiton.com> e-mail: office@magiton.com;

тел: 032 / 622801 тел/факс: 032 / 622802
 hot-line support: 0889300455, 0889300456, 0889300459

ЛАЗЕРНИ ПРИНТЕРИ BROTHER

ПРИНТЕР	КАСЕТА	зареждане без / с чип (или flag gear)	рециклиране без / с чип (или flag gear)
Brother HL 2030 / 2032 / 2040 / 2070 Brother DCP 7010 / 7025, MFC 7420 / 7820N	TN-2000	28 / 37	
Brother HL 2140 / 2150 / 2170, MFC 7320 / 7440/ 7840 Brother DCP 7030 / 7045	TN-2110 TN-2120	30 / 37 33 / 40	
Brother HL 5130 / 5140 / 5150 / 5170 Brother MFC 8220 / 5440 / 8840, DCP 8040 / 8045	TN-3030 TN-3060	33 39	
Brother HL 5240 / 5250 / 5270 / 5280 Brother MFC 8460 / 8860	TN-3130 TN-3170	33 39	
Brother HL 1200/1240/1250/1270/1400/6300/9870	TN-6300 TN-6600	35 42	

ЛАЗЕРНИ ПРИНТЕРИ LEXMARK

ПРИНТЕР	КАСЕТА	зареждане без / с чип (или flag gear)	рециклиране без / с чип (или flag gear)
IBM Lexmark E120	0010S0150 (12036SE)	24 / 30	60 / 66
IBM Lexmark E230/232/238/240/330/332/340/342	0024036SE (12A830)	33 / 39	68 / 74
IBM Lexmark E260/360/460/X363/364/463/464/X203/X204	X203A11G	35 / 42	72 / 79
IBM Lexmark X330 / 340	0X340A11G 0X340A21G	35 / 42	72 / 79

ЦВЕТНИ ЛАЗЕРНИ ПРИНТЕРИ

ПРИНТЕР	КАСЕТА	зареждане с чип	рециклиране
HP 1600/2600/3000 , black	Q6000A	54	-
HP 1600/2600/3000, CM1015/1017MFP C/Y/M CANON LBP 5000	Q6001/2/3A CRG 707C/Y/M	54	-
HP CP1215 / 1515 / 1518 , black	CB540A	44	72
HP CP1215 / 1515 / 1518, CM1312, C / Y / M	CB541 / 2 / 3 A	44	72
HP 2550, 2800 / 2820 / 2840MFP, black	Q3960A	66	call
HP 2550, 2800 / 2820 / 2840MFP, C / Y / M	Q3960 / 1 / 2 / 3A	72	call
SAMSUNG CLP300 / CLX2160 / 3160, Black	CLP-300B	30	-
SAMSUNG CLP300 / CLX2160 / 3160, C / Y / M	CLP-300C/Y/M	27	-



МАГИТОН СЕРВИЗ ООД

Пловдив - ул. "Софроний Врачански" No 19, 21
http://www.magiton.com e-mail: office@magiton.com;

тел: 032 / 622801 тел/факс: 032 / 622802
hot-line support: 0889300455, 0889300456, 0889300459

ЗАРЕЖДАНЕ НА ГЛАВИ ЗА МАСТИЛЕНОСТРУЕН ПРИНТЕР

ПРИНТЕР / ГЛАВА	ЦЕНА
HP51626 / 51629 / 51645 / C6614 / C6615	12
HP C8727 / C6656	8 / 10
HP 21 / 336 / 350 /	8
HP 21XL / 339 / 350XL /	12
CANON BC01 / BC02	10
CANON BC20 / BX20	12
CANON PG 37 / PG40 / PG50	8 / 10 / 12

КОМПЛЕКТИ ЗА ЗАРЕЖДАНЕ НА МАСТИЛЕНОСТРУЙНИ ПРИНТЕРИ

МОДЕЛ ПРИНТЕР	МОДЕЛ ГЛАВА	РЕФИЛ	Производител	Количество	ЦВЯТ	ЦЕНА
HP DeskJet 4xx/5xx № 26	HP 51626	AH626BK2	Fullmark	2 x 40 ml	ЧЕРЕП	15
HP DeskJet 6xx № 29	HP 51629	AH629BK2	Fullmark	2 x 40 ml	ЧЕРЕП	16
HP DeskJet 6xx № 49	HP 51649		Fullmark	3 x 12 ml	ЦВЕТЕН	18
HP DeskJet 8xx/1600/1200 № 45	HP 51645	HPI-0001ND	InkTec	2 x 40 ml	ЧЕРЕП	14
HP DeskJet 9xx/1220 № 78	HP C6578	HPI-0002C	InkTec	3 x 20 ml	ЦВЕТЕН	18
HP DeskJet 39xx/5440/PSC14xx,15xx № 21	C8727/C6656	SH351BK	Fullmark	1 x 20 ml	ЧЕРЕП	9
HP DeskJet 33xx/34xx/35xx/5xxx № 21/ 56	C8727/C6656	SH656BK	Fullmark	1 x 24 ml	ЧЕРЕП	9
HP DeskJet 33xx/34xx/35xx/5xxx № 21/ 56	C8727/C6656	HPI-0005D	InkTec	2 x 20 ml	ЧЕРЕП	9
HP DeskJet 33xx/34xx/35xx/5xxx	C8728/C6657	C8728/C6657	Fullmark	3 x 12 ml	ЦВЕТЕН	16
HP DeskJet 33xx/34xx/35xx/5xxx	C8728/C6657	HPI-0006C	Fullmark	3 x 25 ml	ЦВЕТЕН	17
HP DeskJet PSC15xx,15xx № 336 / 338 / 339	336/338/339	HPI-6065D	InkTec	2 x 20 ml	ЧЕРЕП	14
HP DeskJet PSC15xx,15xx № 342 / 343 / 344	342/343/344	HPI-6066C	InkTec	3 x 25 ml	ЦВЕТЕН	18
CANON BJ10e/2xx / BJC 2xx	BC 02	SC002BK2	Fullmark	2 x 20 ml	ЧЕРЕП	13
CANON BJC 400J/4xxx/5000	BC 20	SC020BK2	Fullmark	2 x 30 ml	ЧЕРЕП	15
LEXMARK CJ1000/1020/2xxx/4076	SL620BK2	SL620BK2	Fullmark	2 x 20 ml	ЧЕРЕП	16
LEXMARK CJ5700/7xxx	SL970BK2	SL970BK2	Fullmark	2 x 20 ml	ЧЕРЕП	15
LEXMARK Z13/23/25/25/33/34/35/6xx	10N0016/0217	SL016BK	Fullmark	1 x 20 ml	ЧЕРЕП	10
LEXMARK Z13/23/25/25/33/34/35/6xx	10N0026/0227	SL026FC	Fullmark	3 x 12 ml	ЦВЕТЕН	12

КАСЕТИ ЗА МАТРИЧНИ ПРИНТЕРИ, лева

CPF 136	12
EPSON LQ 100 / EPSON ACTION 3260	5
EPSON FX/LX/LQ 300/400/570/800/850/870, MX 80	4.50
EPSON LX/LQ/FX 1000/1050/1070/1170, SAMSUNG SP 0921	5
EPSON DFX 5000 / 8000	16
FUJITSU DL 900/1100/1200	5
OKI ML 320/321/390/391/180/182/192	5
OKI ML 520/521/590/591/590+/591+	6
PANASONIC KX-P 1121/23/24/50/80/90/91, 1693/95, 2023	4.50
PANASONIC KX-P 1540/1624	7
PANASONIC KX-P 2130/2135, KX-P 160	7
PANASONIC KX-P 3626, KX-P 170, KX-P 1694	14
STAR LC 10/20, LC100, LX 10/100, NX 1000/1001/1000II/1040	3.60
STAR LC 15, LC 24-10/20/100/200, NX 1500	4
STAR ND/NL/NR/NX 15	12
STAR LC 1511/1521/4511/ LC 2430	8